

MP-600HD USER'S MANUAL



Mobile DVR (3.5" Touch Screen)

Warning



Clean the product by any chemicals such as alcohol is prohibited.

Accessorios



MP-600HD



Remote Control



AV Cable
(AF-PRRR12)



Plug convertor
For camera
(AF-224)



Battery



USB Cable/charge
(AF-UU070)



Adaptor



10 pin USB Cable
(AF-UD02)




Cable for
external camera
(AF-PDRR12-01)



4 GB SDHC

Dimension

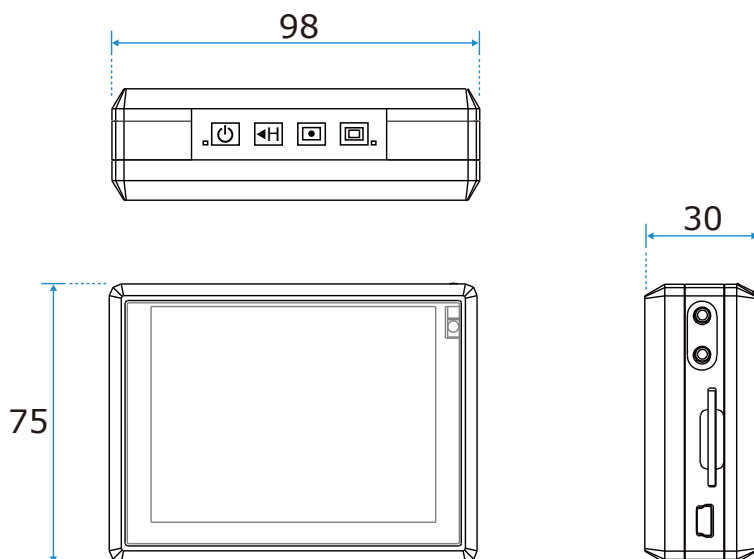

Unit : mm (± 0.5)

Part Name


MP-600HD MAIN DEVICE

◀ TFT LCD Off / key lock



REC.

Power ON/OFF


Snapshot

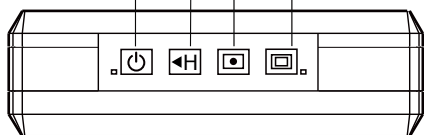

IR Remote Control Receiver

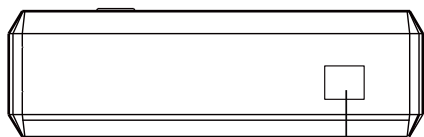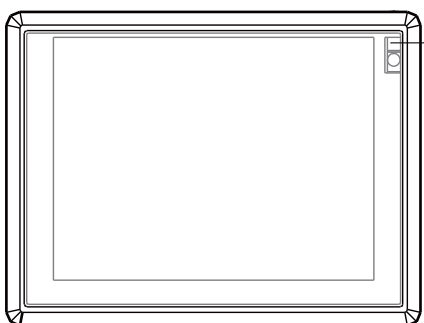

Reset

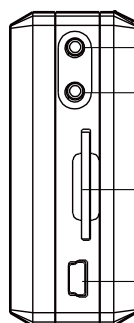

DC 5 V (130mA-max) Cam in

A/V Output

SD/SDHC Slot

MINI USB / Power In

REMOTE CONTROL



REC.(record)/ Stop REC. /perview



Snapshot



Menu/Setup



Esc/Return



File menu




Delect



Volume up



Volume down

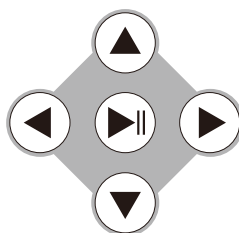

up



down



left



right




play / stop / comfirm

1. Manual button description


- press (A) button ,yellow indicator (①)and red indicator light will be on, now it enters into start up ready mode
- press (C) button ,blue indicator(②) light will flash(one time), and take snapshot.
- press (D) button ,blue indicator (②) light will be on, and start REC.

⚠ User needs to unlock hold key in order for MP-600 to turn on

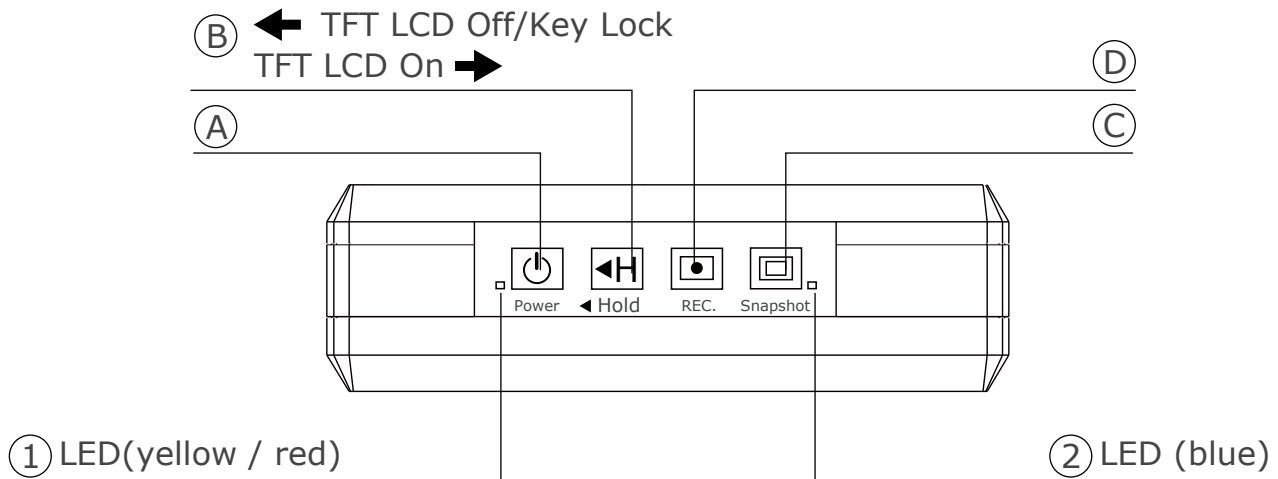





2. Touch Screen description

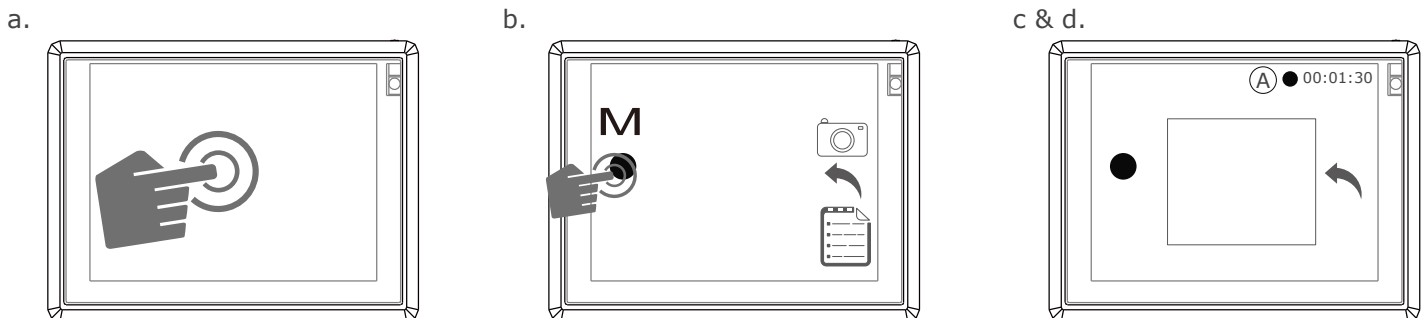- touch screen
- press ● button ,blue indicator light will be on, and start REC.
- press ● or ↶ button ,blue indicator light will turn off, and start REC.
- (A) Rec. times


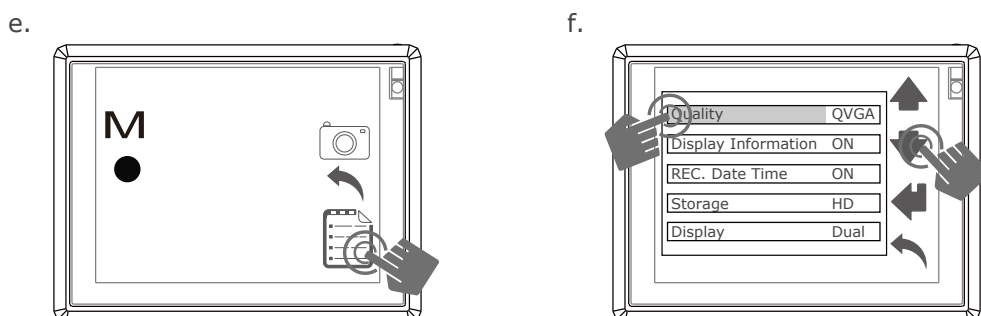


- press 📄 button ,into REC. setting
- press item or press ▲ & ▼ to choose item




g. press item then press  &  to chose item.after choose you wanted item ,press item directly or press  to be set

g.

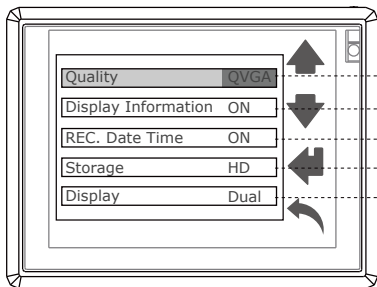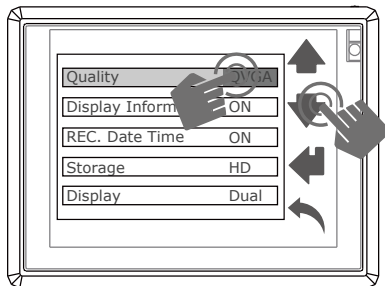


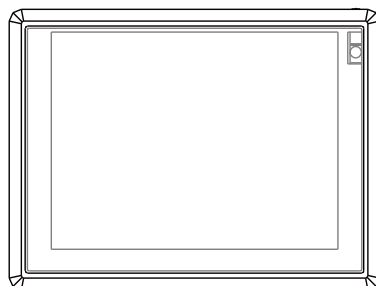
QVGA or VGA or D1
ON or OFF
ON or OFF
HD or SD
Dual

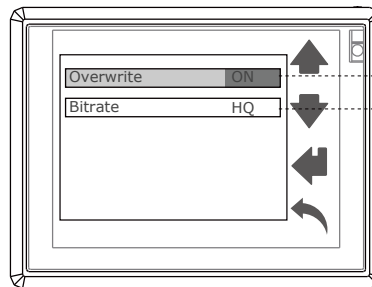

ON or OFF
HQ or Normal

3.Remote control operate description


a. press remote control the  button ,MP-600HD of blue indicator light will be on, now it starts to REC. press remote control  again to stop REC.



Snapshot Mode

1.Manual button description

a. press "snapshot" button ,blue indicator light will flash(one time), and take snapshot.

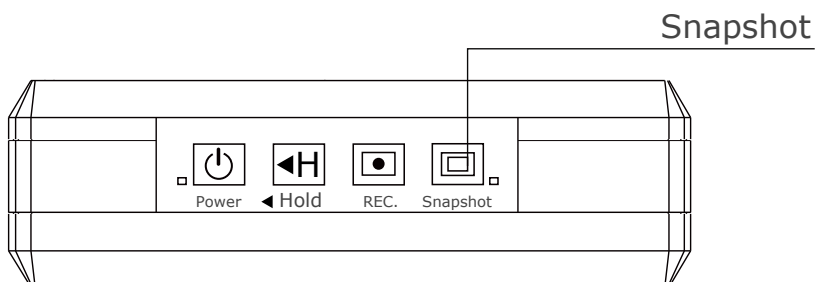


2.Touch Screen description


a. touch screen

c. press  button ,blue indicator light will flash(one time), and snapshot


c.

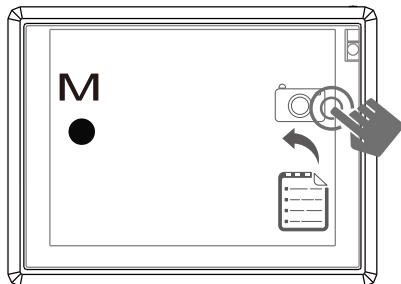

3.Remote control operate description

a. press remote control  button ,blue indicator light will flash(one time), and snapshot.

d.

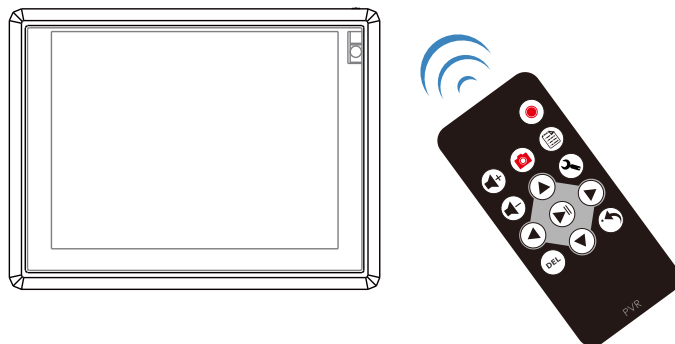


Menu



a. press  button into main menu

b. press icon button into what you want item



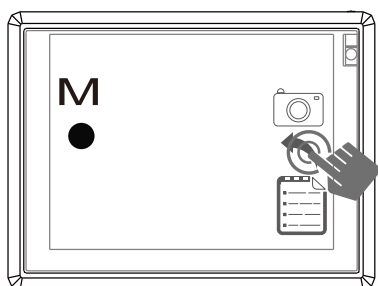

a.


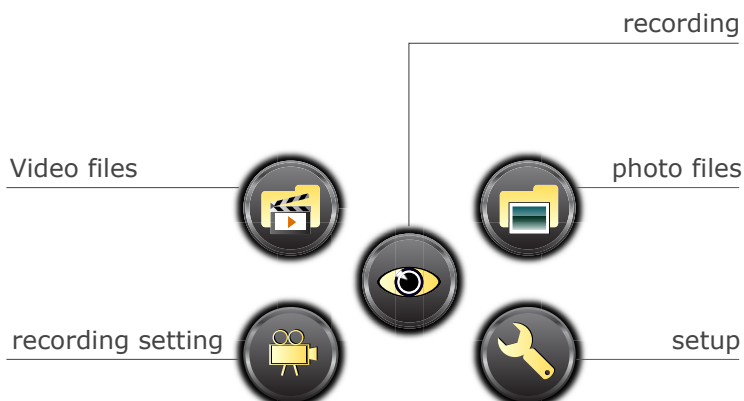
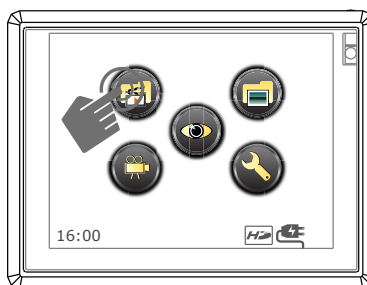


b.






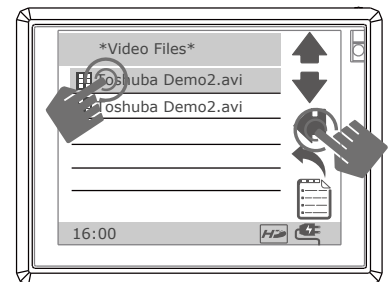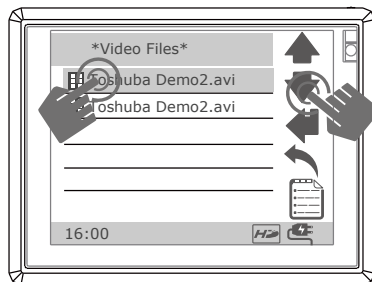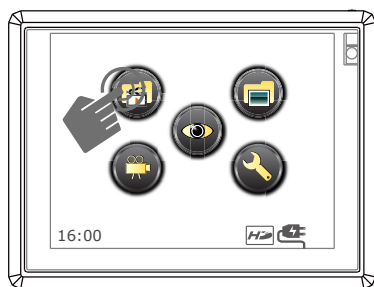


1. VIDEO Files



- a. press  icon into video files , press item or press  &  to chose item .
press item again or  to start preview video.

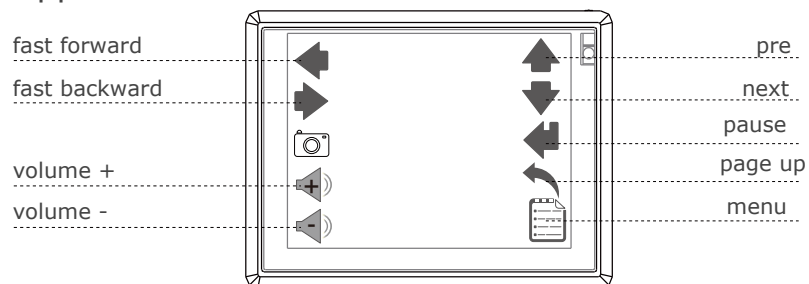








- b. press screen to appear icon

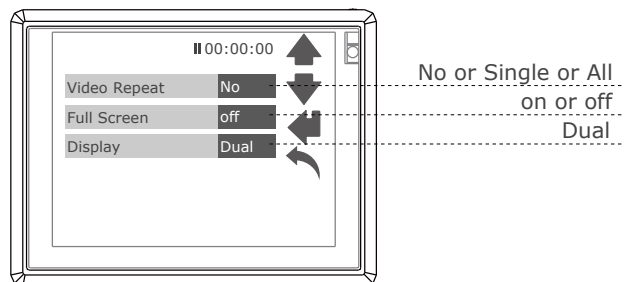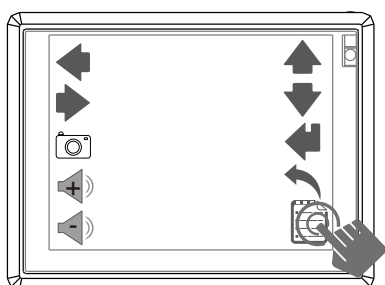


- c. press screen  icon to into this video editing, here you can change video repeat , screen or display press  &  to chose item ,press item again or  to finish setting ,then press  return to preview video




- d. press screen  icon to into this video item, here you can delete , copy or remove it. press  &  to chose item ,press item again or  to finish setting

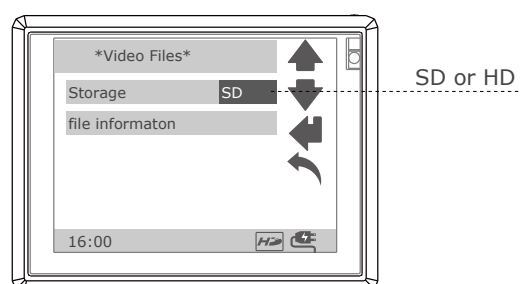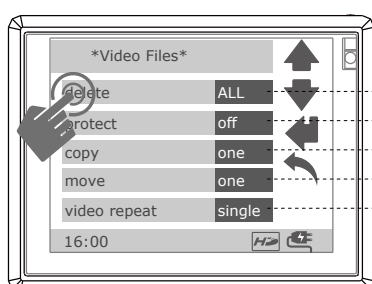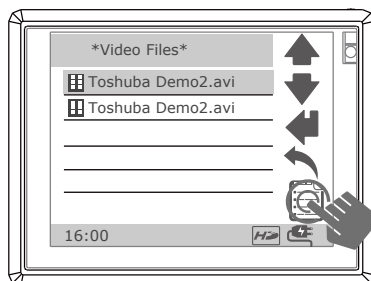

1.delete press icon directly or press screen ➡ & ⬅ icon to chose item, then press ⬅ or press "ok" to delete , then press screen ↶ icon to return to video files menu


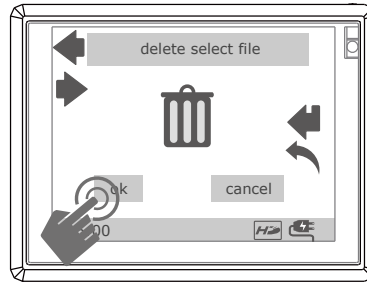


2.move press icon directly or press screen ➡ & ⬅ icon to chose item, then press ⬅ or press "ok" to move , then press screen ↶ icon to return to video files menu


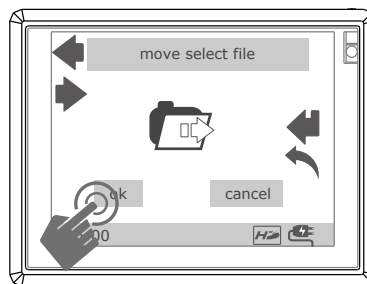


2.PHOTO Files



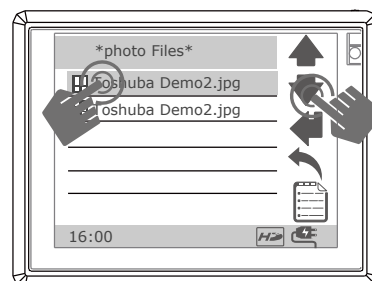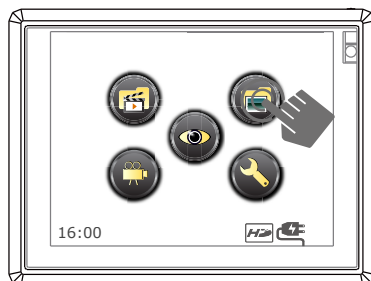

a. press 📁 icon into photo files , press item or press ⬆ & ⬇ to chose item
press item again or ⬅ to browse Photos

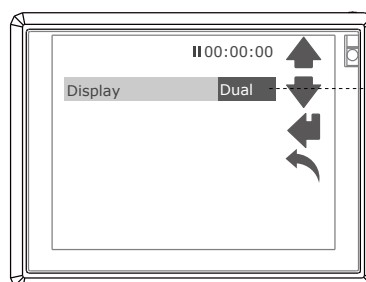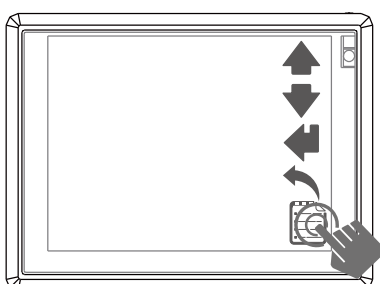






b. press screen to appear icon, then press screen 📄 icon to into this photo editing, here you can chane display press ⬆ & ⬇ to chose item ,press item again or ⬅ to finish setting ,then press ↶ icon to return to browse photos




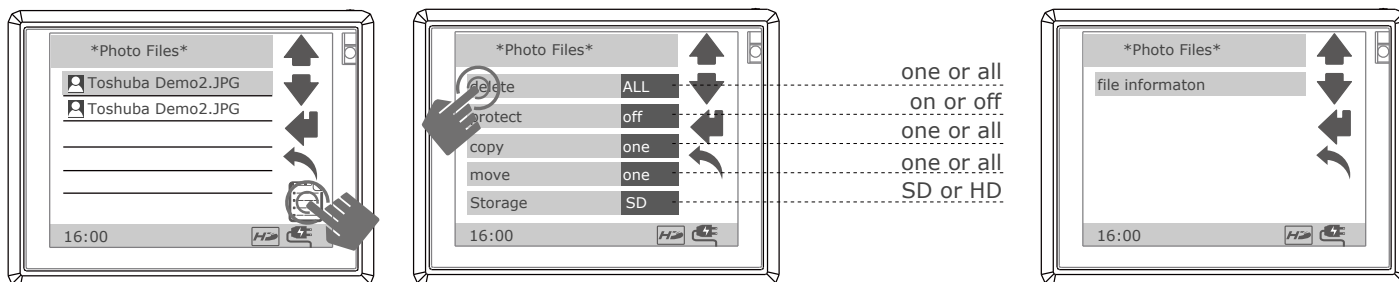



Dual


b. press screen  icon to into this photo item, here you can delete , copy or remove it. press  &  to chose item slightly,press item again or  to finish setting

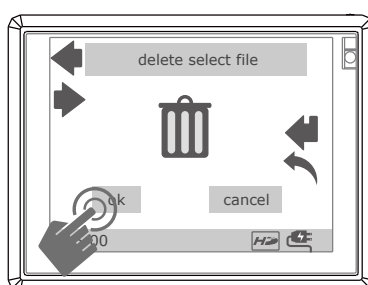

1.delete press icon directly or press screen  &  icon to chose item, then press  or press "ok" to delete.
press screen  icon to return to photo files menu




2.move press icon directly or press screen  &  icon to chose item, then press  or press "ok" to move
press screen  icon to return to photo files menu

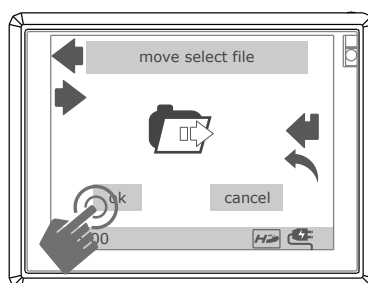


3.Recording & Record setting

a. press  icon into REC.

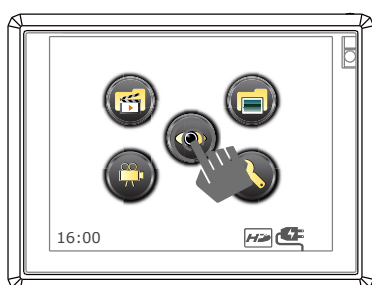


b. press  icon into Record setting

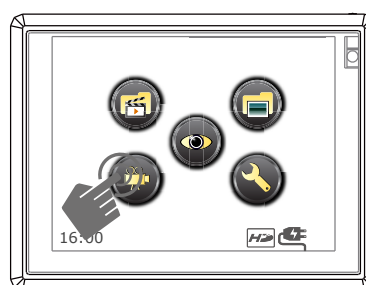



C. In the record setting ,press screen item directly or press ▲ & ▼ to chose item , press item again or ◀ to finish setting

Video Line in REC : in this mode you can manual-control REC.


Motion detect : in this mode , MP-600HD connected camera and it will motion detect automatically. press screen ◀ icon to return to main menu

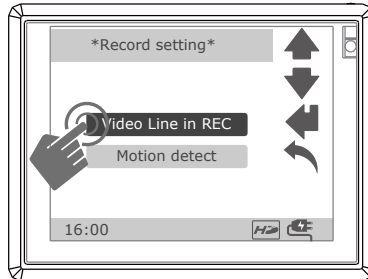

1 In Motion detect ,press screen to appear icon,then press 📄 icon to into Motion detect editing,press ▲ & ▼ to chose item

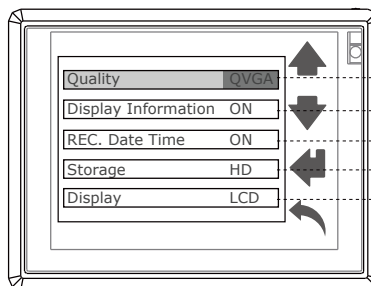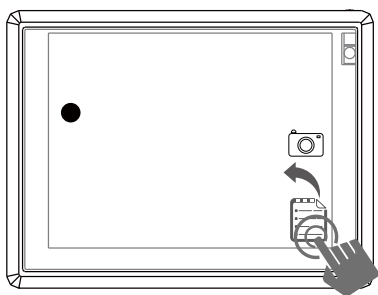


QVGA or VGA or D1
ON or OFF
ON or OFF
HD or SD
Dual

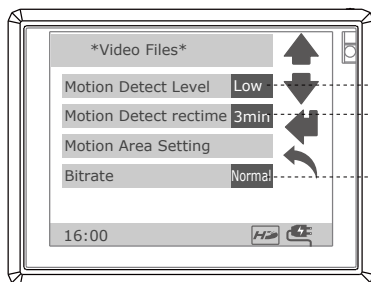

Low or Middle or high
30 sec or 1min or 3min or 5min or 10min
HQ or Normal

Motion Detect Area : there are nine zones ,and it can easy to set motion detect area what you want (note:the red squares part can be motion detect)


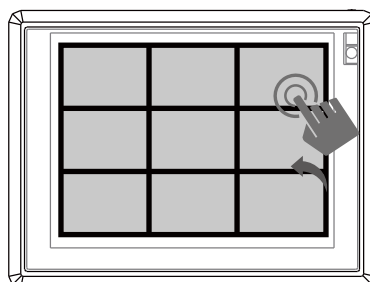



4.Setup


a. press  icon into setup

b. press screen item directly or press  &  to chose item ,press item again or to finish setting. press screen  icon to return to main menu

( "Back light off " function is replaced by " ◀ Hold " key.)

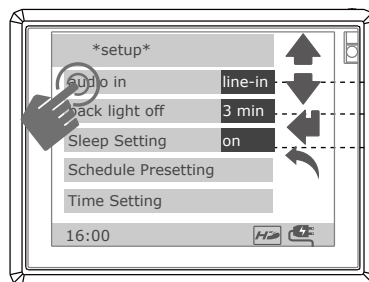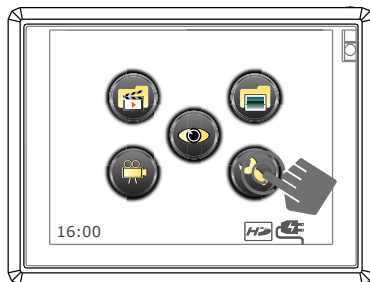


built-in or line-in
 no function
 no or 30min or 60min or 90min

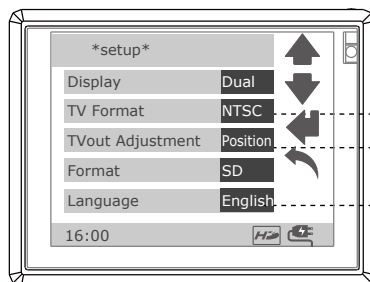


NTSC or PAL
 Position or Zoom



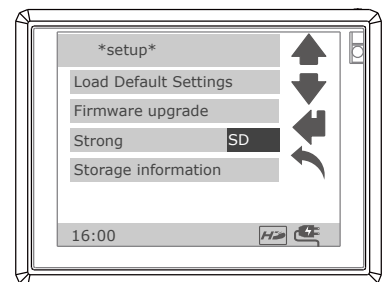

7 language (English ,Japanese ,Chinese
 Francais ,Deutsch ,Italiano ,Espanol)

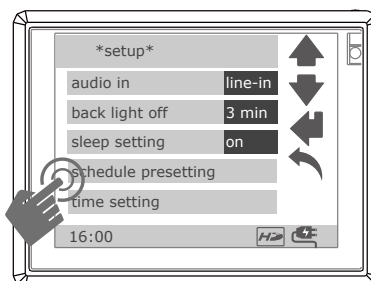

c. Schedule presetting:




In this mode you can set the time ,then MP-600HD will record automatically at the set time.



1. press screen item directly or press  &  to chose item ,press item again or  to finish setting. press screen  icon to return to setup menu

precautions:



- It is needed to set the setup item as on to successfully the reserved recording
- The schedule will be executed only when the device is in power on state
- The recorded files will be save in video folder

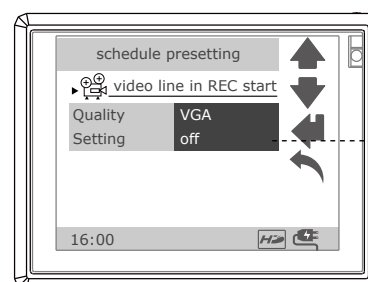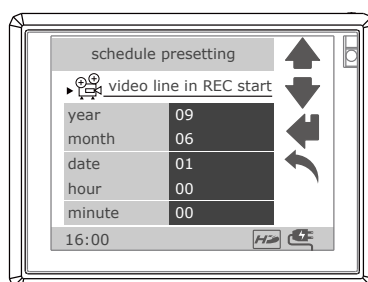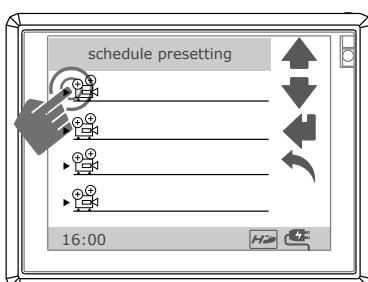

off or on



d.time setting

1. press screen icon directly or press ➡ & ⬅ to change year/month/date and time
press screen ↶ icon to return to setup menu

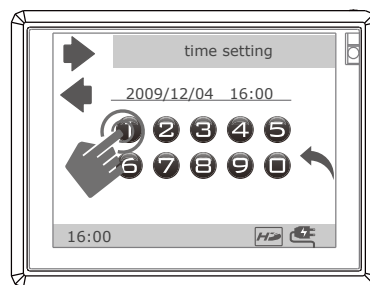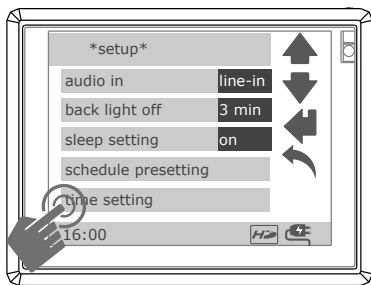


e.firmware upgrade:

insert the memory card which contains updated software into the device and press "ok", after the system is updated, it will reboot automatically; if the message update error is shown, it means that there are errors during updating, it might be that the software is incomplete or the memory card has some problem, please use other memory cards, or reboot the device after inserting the memory card

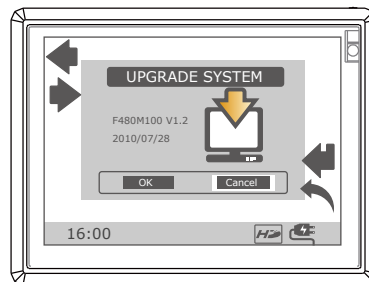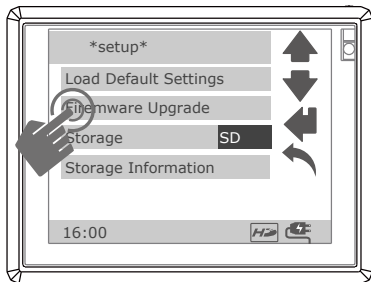


f.Load Setup Defaults : select to reset default values

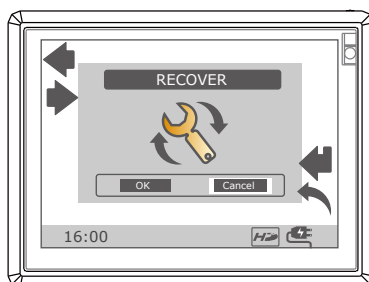




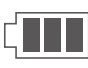


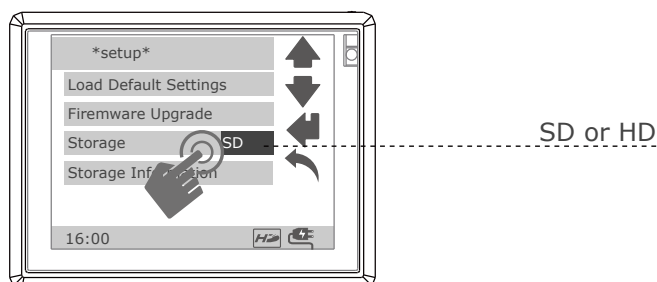






g.Storage: (optional Built-in 160G 1.8" Hard Drive type item NO: MP-600HD)

MP-600HD has two storage that SD or HD. select SD storage before, be able to insert a SD card, then you can to set SD storage and show the word SD in the right side
If set HD storage, it will show HD word in the right side



h.Storage information: show the size and the residual space


5.icon name

 UP/ Previous	 Esc / Return	 Snapshot	 battery
 Down/Next	 ENTER / PLAY / STOP	 Record	
 Right / FF	 Motion Detecting	 power in	
 Left / RW	 Sub-Menu	 Delete	

Link With Other Equipments


1.External video source recording

By connecting with an external video sensor,it can record the video into video files
In mpeg4 format(the file format is avi)

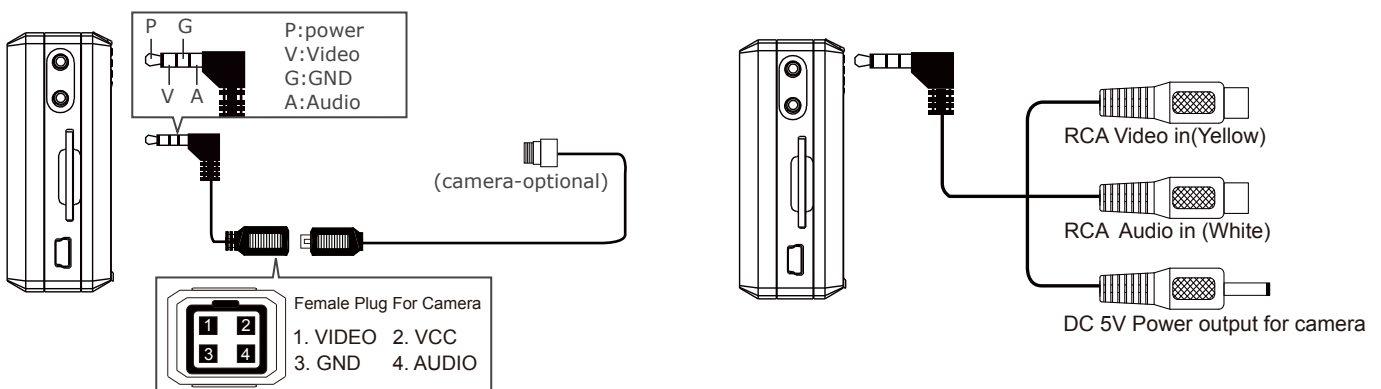


2.Output to TV screen

Output the image to the TV through an RCA cable .
("LCD" and "TV" will synchronized-display)

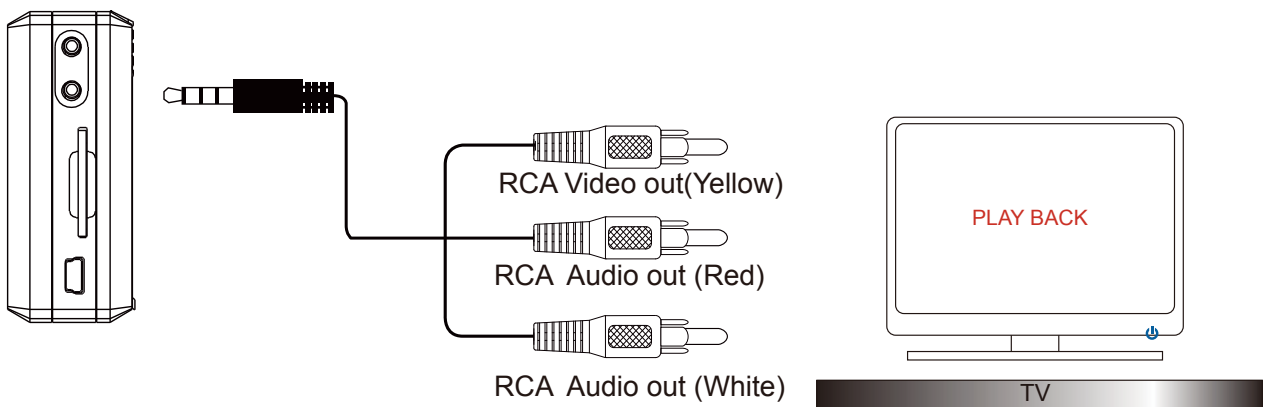

3. Connect to PC

After MP-600HD power on, connect the (A) and (B) ends of the USB cable to MP-600HD and PC

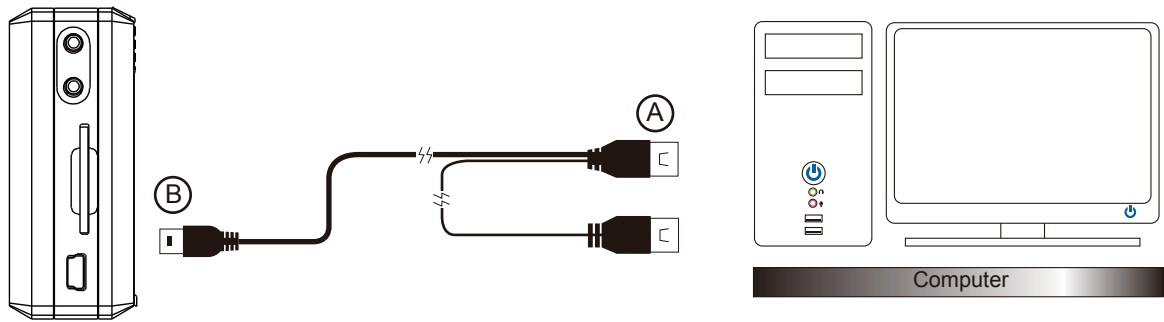


4. The battery charging

When the power goes down, power LED indicator blinks and the meter with no bars displays on the bottom right corner of the screen, which indicates that the power of the host exhausts and please recharge it immediately.

precautions:


Connect the main device with the power supply and then plug the power supply into the electrical outlet. The led light(red) will always be on.

1: Charge with adapter

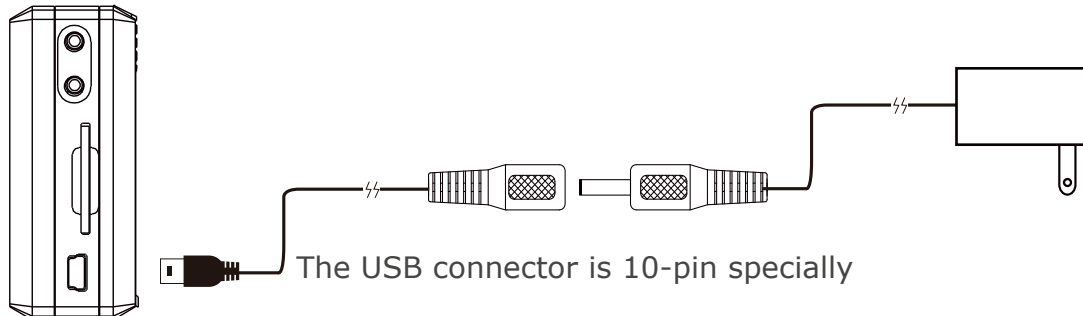

2: Charge with USB

When the customer charge the battery with USB , that the (A) and (C) both connect with PC

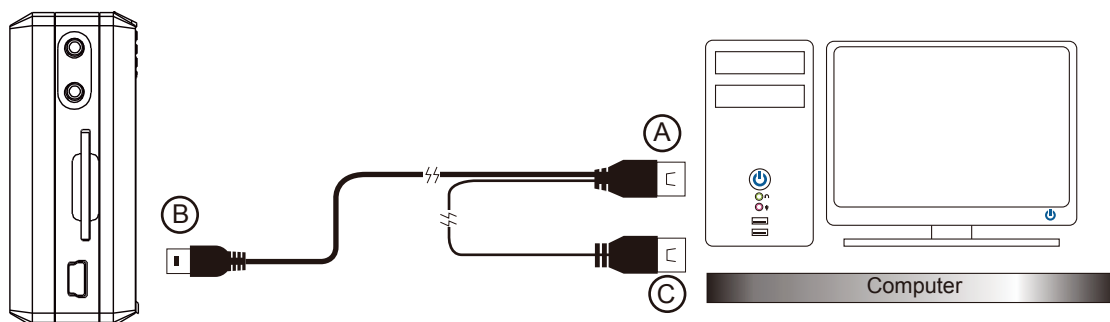

Specification

Video Record

- (1) Compliant with MPEG-4 ISO/IEC 14496-2 , MPEG-4(AVI)
- (2) Audio Compression : ADPCM
- (3) HQ UP to 4Mbps
- (4) Video file format : AVI
- (5) Real time Record (AVI line in)
- (6) Video Record Quality
 - a. D1 : 720 x 480-NTSC/PAL (16fps)
 - b. VGA : 640 x 480-NTSC/PAL (30fps)
 - c. QVGA : 320 x 240-NTSC , 352 x 288-PAL (30fps)
- (7) RTC Stamp embedded in Video stream
- (8) Real-time Record
- (9) Motion Detect
- (10) LOOP circulate video recording
- (11) Support Schedule recording (4 programs setting)
- (12) Audio input select by user (from audio line in or built-in microphone , microphone only consider indoor use)

Photo Snapshot

- (1) Photo snapshot under preview mode.
- (2) File format : JPEG (VGA quality)

I/O Interface

- (1) AV Line in with 2.5mm Phone Jack
- (2) AV Line out with 2.5mm Phone Jack
- (3) USB 10pin (USB & Charging)
- (4) SD card slot SDHC
- (5) IR

Display

- Touch Screen 3.5" TFT LCD
- (1) rechargeable Li-ion battery NP120 (1900mAh)
- (2) Built-in charging circuit
- (3) 100~240V 50/60Hz AC adaptor , DC 5V~2A output power management
 - a. AV line in / out " Auto power off " will be disabled.
- (4) Battery Status indicator
 - a. Full (100% 2hr)
 - b. Middle (50% 1hr)
 - c. Low battery (10% 10min) blinking for 30 seconds
 - d. Power off (5%) red led on and power off after 1min.

Storage

- (1) Support SD card (Both support SD 1.0 & SD 2.0 (SDHC))
- (2) Support SD memory up to 32G
- (3) Support USB 1.1 & USB 2.0 to SD & HDD
- (4) optional Built-in 160G 1.8" Hard Drive TYPE ITEM NO: MP-600HD

Link to PC

- (1) Support Windows 2000/XP/VISTA/7
- (2) Connect the USB cable from PC to device , directly exchange file from PC